



Sample Multimedia Control Panel

### Operating Instructions:

1. Press the “**ON**” button\*.  
***[\*The button will flash during projector warm up, please be patient as this may take up to 2 minutes!]***
2. To select a source follow these steps...
  - a. **Classroom Dell or iMac computer:**
    - i. Make sure the dedicated classroom Dell or iMac is powered on.
    - ii. Press the “**PC**” button.
  - b. **Laptop:**
    - i. Plug the VGA cable from the input panel to the laptop’s VGA out.
    - ii. **Make sure your laptop is set to output external VGA\*\*.**
    - iii. Connect the audio cable to the headphone jack of the laptop.
    - iv. Make sure your laptop volume is turned up.
    - v. Press the “**LAPTOP**” button.
  - c. **DVD:**
    - i. Insert a DVD.
    - ii. Press the “**DVD**” button.
    - iii. Use the DVD Controls on the panel.
  - d. **VCR:**
    - i. Insert a VHS tape.
    - ii. Press the “**VCR**” button.
    - iii. Use the VCR Controls on the panel.
  - e. **Document Camera:**
    - i. Turn the Document Camera power on.
    - ii. Press the “**DOC CAM**” button.
  - f. **S-Video Input:**
    - i. Connect the S-Video source to the input panel.
    - ii. Connect the audio source to the RCA jacks on input panel.
    - iii. Press the “**S-Video**” button.
3. To turn off the system press the “**OFF**” button.  
***[Wait 2 minutes for the projector to cool off before turning back on.]***

\*\*Most laptops require a combination of keystrokes to enable the external VGA output. Dell laptops usually require you hold down the blue “Fn” key and press the “F8” {CRT/LCD} key. Apple laptops usually require the “option” and “F7”. Repeat keystrokes to toggle display mode.